

---

Installation Instructions >> Pannier Racks >> BMW F800GS

---



---

Installation Instructions >> Pannier Racks >> BMW F800GS

---

1. Remove the passenger handle by using a ratchet and T40 torx bit.



2. Mount the right side pannier.



---

3. Secure it on by using the supplied M8x30mm bolts. Leave it loose.



4. Insert the supplied M8 long bolt to secure the rear end of the pannier racks.



---

## Installation Instructions >> Pannier Racks >> BMW F800GS

---

5. Mount the left side pannier. Be careful when feeding the mounting tab between the exhaust muffler and the subframe.



6. Insert and hand-thread both M8 Allen bolts. Leave it loose!




---

7. Mount the rear cross brace.



8. Add all four M6 hex bolts, washers and locking nuts. Using a 10mm socket and ratchet on one side while holding down on the other with a 10mm ratchet tighten the bolts and nuts.

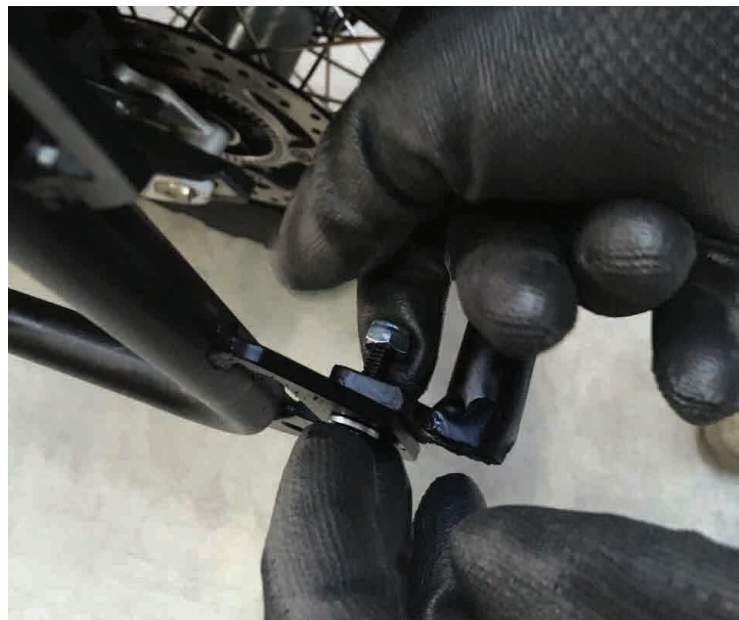

---

## Installation Instructions >> Pannier Racks >> BMW F800GS

---

9. Finally, tighten all the bolts and nuts and double check them after a test ride.



## BMW F800GS Pannier Racks - Hardware kit and recommended tools



1. 2x M8x50mm Allen bolts
2. 4x M6x16mm hex head bolts+washers  
+locking nut
3. 6x M8x30mm Allen bolts+washers
4. 10mm wrench
5. Ratchet
6. 6mm Allen key
7. 10mm socket