




OUTBACK
MOTORCYCLES

Installation Instructions >> Rear Rack >> KTM 1090/1190/1290 ADV

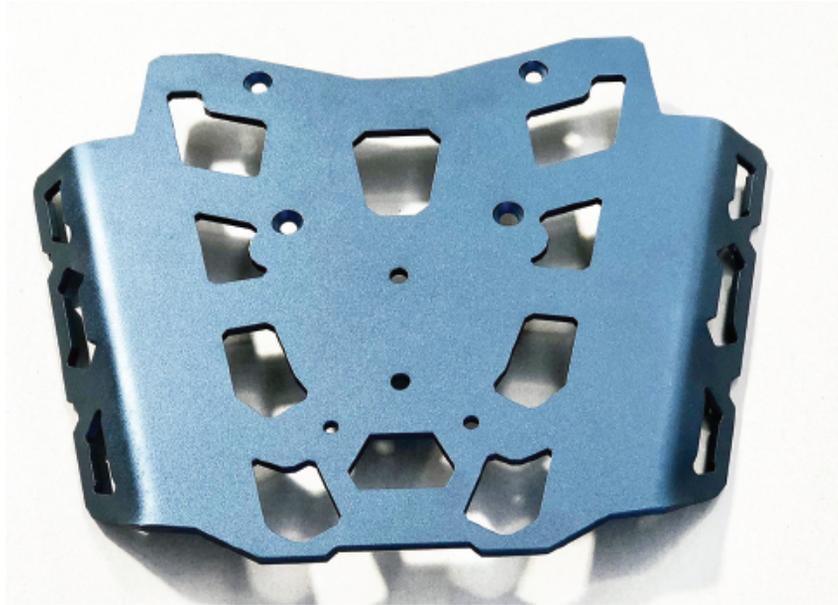

1.

Installation Instructions >> Rear Rack >> KTM 1090/1190/1290 ADV

1. Place the four spacers on the rear end of the passenger handles. Keep pressure on it to prevent it from moving. Tall spacer will be placed in the front holes and the short spacers will go in the rear two holes.



2. Next, take the rear luggage rack and gently put it on top of the four spacer. Make sure the mounting holes all line up.



2.

OUTBACK MOTORTEK

3. Insert the two M8x80mm bolts in the front holes and the two M8x65mm bolts in the rear holes on the rack.



4. Take a 5mm Allen key or Allen socket and a ratchet and tighten down all four bolts.




3.

OUTBACK MOTORTEK

Congratulations! You've completed installing your Outback Motortek product.

Important: double-check all four bolts after a test ride of at least 150km or 90miles.

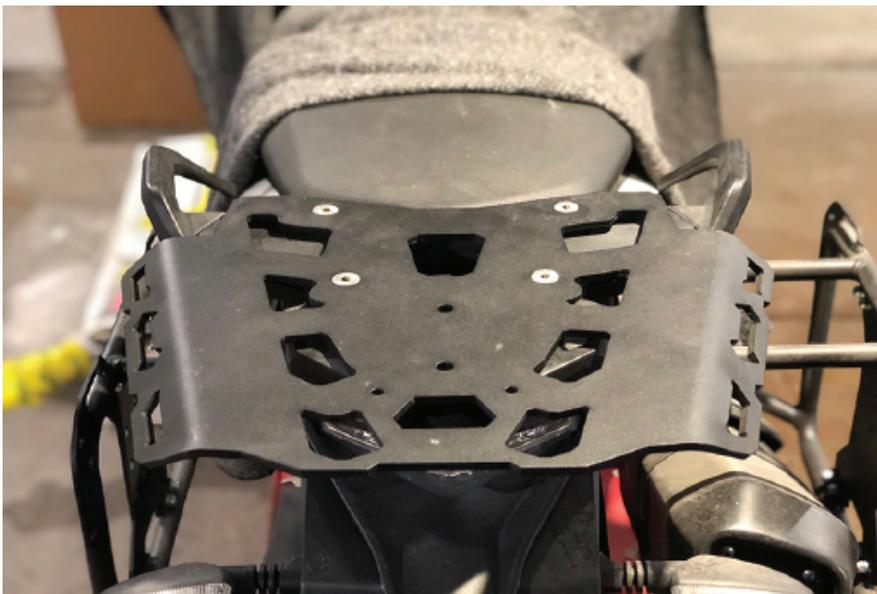

Should you have any question regarding the installation, please contact us at info@outbackmotortek.com.

Or call toll free at 1 877 931 3636

Important note! Outback Motortek recommends its customer to install their products by a certified, experienced motorcycle mechanic. Outback Motortek assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of its products. In no event shall Outback Motortek be liable for incidental or consequential damages relating to or resulting from the use of its product or any of its parts.

4.